EduTouch PX Home Screen Quick Reference Guide



- Swipe up from the centre to access the **Inputs, Volume** and **Brightness.**
- Swipe up from the left or right hand corners to display the **Tools** menu.
 - Access the **Home**, **Go Back**, **Open Apps** and **Annotation** tools on the **Sidebar**.
- Displays if an optional built-in **computer** is installed.
- Swipe the entire screen to the right to display the **Apps** screen. Swipe the entire screen to the left to display **EShare** - the wireless screen sharing app.

